



# Samsung WB150F LCD Screen Replacement

The Samsung WB150F will be taken apart and the LCD screen will be removed and replaced in this guide.

Written By: Patrick Gouveia



## INTRODUCTION


This guide will teach someone how to change the LCD screen on the back of the camera.

## Step 1 — LCD Screen



- Take off the front casing by taking out the screws.
- The casing can be pulled from the camera.


## Step 2

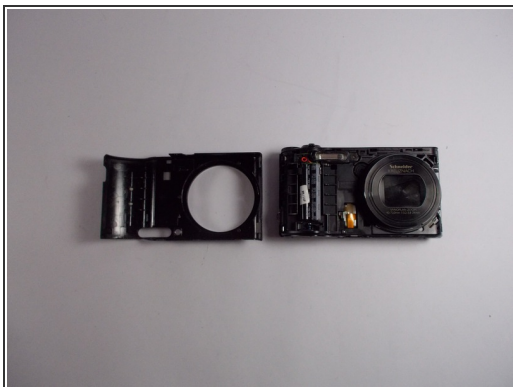

- Flip the camera over and pry the back shell of the camera off with a wedge. There shouldn't be screws to unscrew in this step.




## Step 3

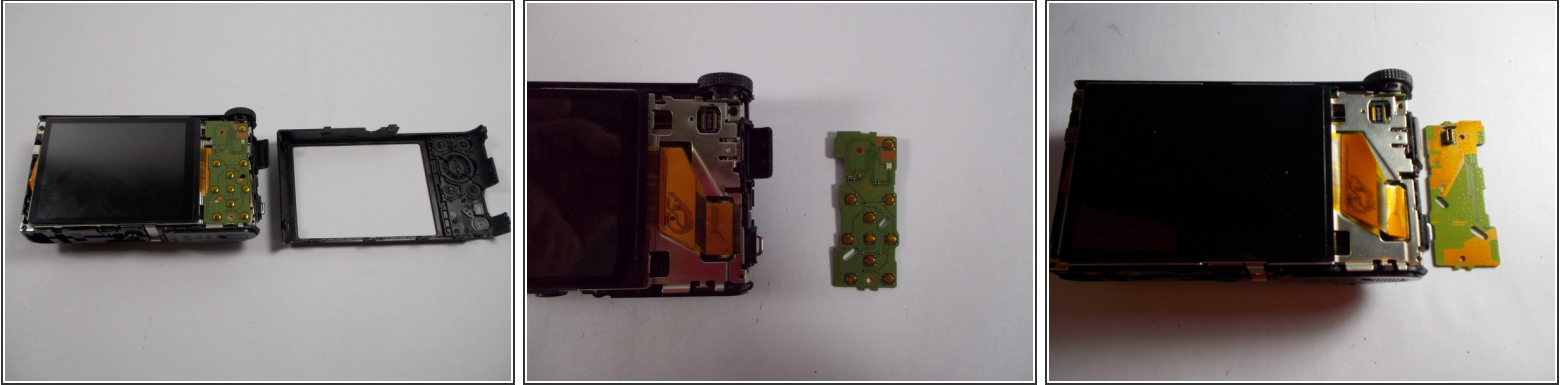


- Remove the button circuit board from the camera by unplugging it. The plug is located in the upper right corner of the screen side.

## Step 4

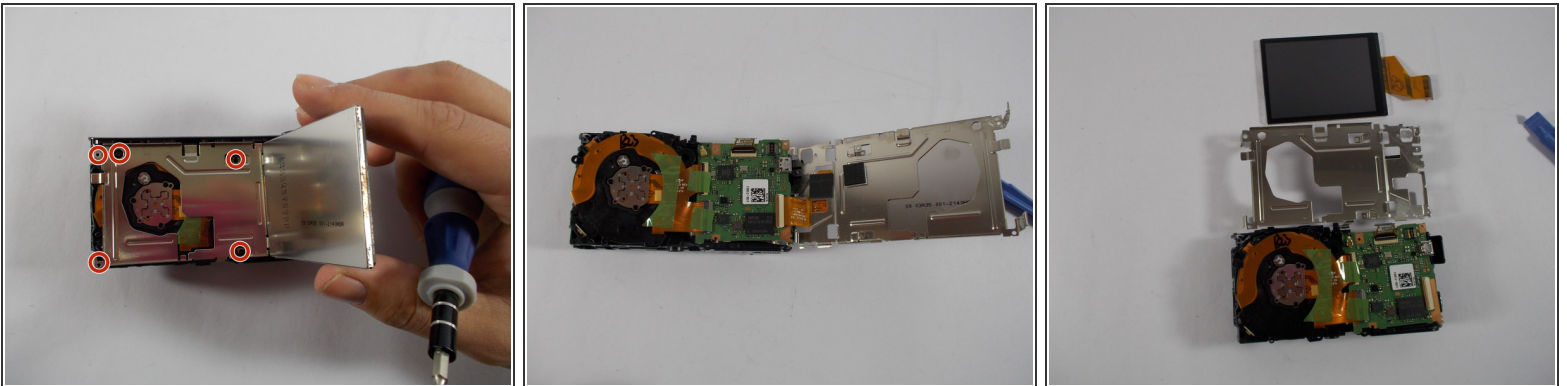


- The screen cannot be replaced without first taking off the metal casing on the inside of the camera. The LCD screen has a ribbon going to the main circuit board that needs to be unplugged.
- The metal casing needs to be pulled out of the camera by first unscrewing it. The old screen can now be replaced.

## Step 5

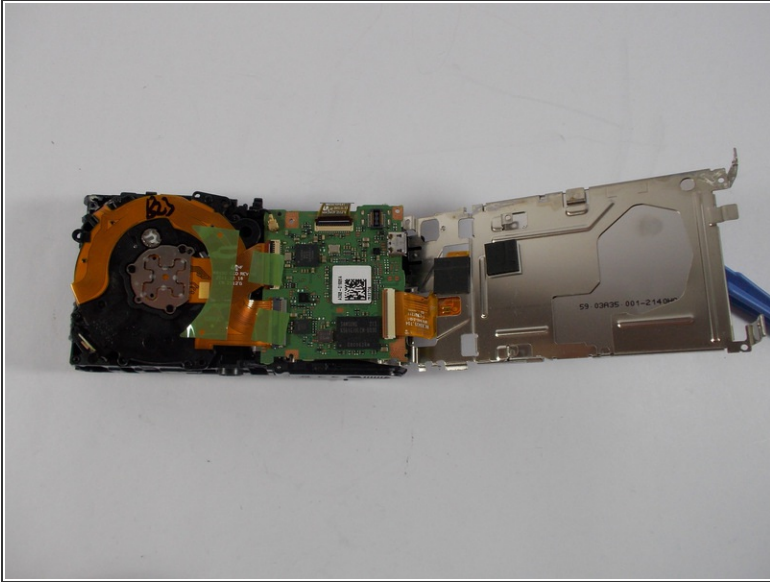

- Plug the replacement screen into the main circuit board through the metal casing. then put the metal casing back on and repeat all steps, prior to this step, in reverse.

## Step 6

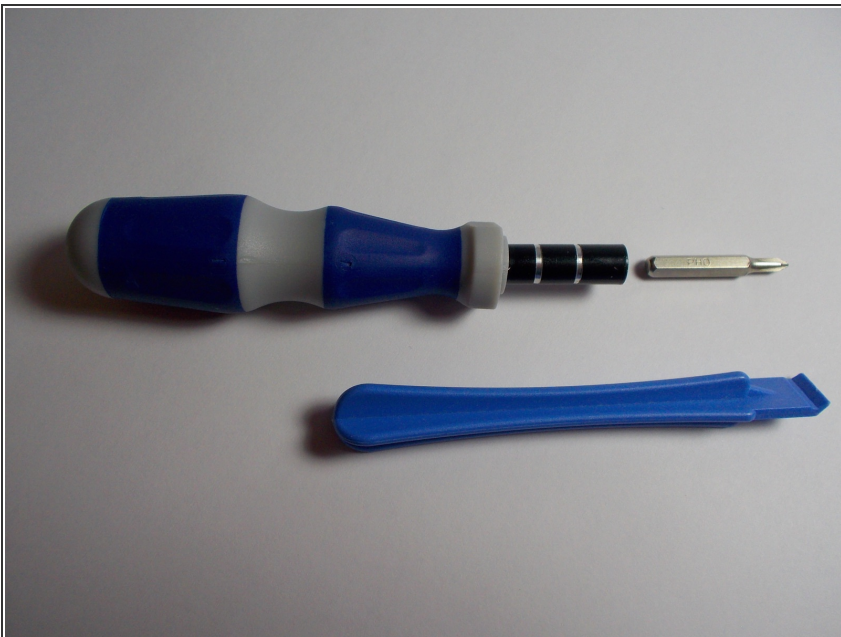

- A PHO Phillips head screwdriver and a plastic wedge were the only tools used in the making of this guide.

To reassemble your device, follow these instructions in reverse order.

